

SATEL-LP-AO4

I/O extension module, 4 analog current/voltage outputs

Data sheet
106926_en_00

© SATEL

2015-10-27



1 Description

The I/O extension module can be used in conjunction with SATEL-LP wireless modules. In a station structure, you can connect up to 32 I/O extension modules to a wireless module via the DIN rail connector.

The analog I/O extension module is used for processing four output signals.

Features

- Easy and tool-free I/O mapping via thumb wheel on the front
- Modular design via TBUS DIN rail connector (hot-swap capable)
- Channel-to-channel electrical isolation
- 4 analog outputs (alternatively 0/4 ... 20 mA, 0 ... 10 V DC)
- 16-bit resolution of the analog outputs (accuracy < 0.02%)
- DIP switches for HOLD/RESET behavior of the outputs
- International approvals



Make sure you always use the latest documentation.
It can be downloaded from the product at www.satel.com.

SATEL

2	Table of contents	
1	Description	1
2	Table of contents	2
3	Ordering data	3
4	Technical data	3
5	Safety regulations and installation notes.....	6
	5.1 Installation notes	6
	5.2 UL Notes	6
6	Installation	7
	6.1 Structure	7
	6.2 Basic circuit diagram	7
	6.3 Configuration	8
	6.4 Display and diagnostic elements	9
	6.5 Analog output	9
	6.6 Assembly/removal	10
	6.7 Connecting the cables	11
7	Process data.....	12

3 Ordering data

Description	Type	Order No.	Pcs./Pkt.
Analog I/O extension module with 4 analog current/voltage outputs (0/4 mA ... 20 mA, 0...10 V), with screw connection, incl. DIN rail connector	SATEL-LP-AO4	YI0104	1
Accessories	Type	Order No.	Pcs./Pkt.
2400 MHz wireless transceiver with RS-232, RS-485 2-wire interface, expandable with I/O extension modules, with screw connection, antenna connection: RSMA (female), including DIN rail connector, without antenna	SATEL-LP24	YM0424	1
868 MHz wireless transceiver with RS-232, RS-485 2-wire interface, expandable with I/O extension modules, with screw connection, antenna connection: RSMA (female), including DIN rail connector, without antenna.	SATEL-LP8	YM0408	1
900 MHz wireless transceiver (transmitter and receiver) with RS-232 and RS-485 interface, can be extended with I/O extension modules	SATEL-LP9	YM0409	1
Analog extension module with 4 analog current inputs (0/4 mA ... 20 mA), with screw connection, incl. DIN rail connector	SATEL-LP-AI4	YI0103	1
Temperature I/O extension module with 4 PT 100 inputs (-50...+250 °C), with screw connection, including DIN rail connector	SATEL-LP-PT100	YI0108	1

4 Technical data

Dimensions	
Dimensions W/H/D	17.5 mm / 99 mm / 114.5 mm
General data	
Overvoltage category	II
Mounting position	any, on standard DIN rail NS 35 in accordance with EN 60715
Degree of protection	IP20
Pollution degree	2
Type of housing	PA 6.6-FR, green
Flammability rating according to UL 94	V0
MTTF (mean time to failure) Telcordia standard, 25°C temperature, 21% operating cycle (5 days a week, 8 hours a day)	999 Years
MTTF (mean time to failure) Telcordia standard, 40°C temperature, 34.25% operating cycle (5 days a week, 12 hours a day)	404 Years
MTTF (mean time to failure) Telcordia standard, temperature 40°C, operating cycle 100% (7 days a week, 24 hours a day)	156 Years
Supply	
Supply voltage range	19.2 V DC ... 30.5 V DC (TBUS)
Max. current consumption	≤ 115 mA (At 24 V DC, at 25°C)
Transient surge protection	Yes

Analog outputs

Number of outputs	4
Voltage output signal	0 V ... 10 V
Output signal maximum voltage	approx. 10.83 V
Load	≥ 10 kΩ
Precision	typ. 0.5 % (Voltage output)
Current output signal	0 mA ... 20 mA 4 mA ... 20 mA
Output signal maximum current	approx. 21.67 mA
Load	≤ 500 Ω
Precision	≤ 0.02 % (at 25 °C)
Resolution (bit)	16 bit
Temperature coefficient, typical	0.0025 %/K (at -40 °C ... +70 °C)
Protective circuit	Transient protection of outputs

Electrical isolation

Analog I/O	50 V (Rated insulation voltage (in each case between the TBUS analog outputs / supply, reinforced insulation according to EN 61010))
	300 V (Rated insulation voltage (to adjacent devices, basic insulation in accordance with EN 61010))

Test voltage

Analog I/O	1.5 kV AC (50 Hz, 1 min.)
------------	---------------------------

Connection data

Connection method	Screw connection
Conductor cross section, solid	0.2 mm ² ... 2.5 mm ²
Conductor cross section, flexible	0.2 mm ² ... 2.5 mm ²
Conductor cross section AWG/kcmil	24 ... 14
Stripping length	7 mm
Tightening torque	0.6 Nm

Status indication

Status display	Green LED (supply voltage, PWR) Green LED (bus communication, DAT) Red LED (periphery error, ERR)
----------------	---------------------------------------------------------------------------------------------------------

Ambient conditions

Ambient temperature (operation)	-40 °C ... 70 °C (>55°C derating) -40 °F ... 158 °F (>131°F derating)
Ambient temperature (storage/transport)	-40 °C ... 85 °C -40 °F ... 185 °F
Permissible humidity (operation)	20 % ... 85 %
Permissible humidity (storage/transport)	20 % ... 85 %
Altitude	2000 m
Vibration (operation)	in accordance with IEC 60068-2-6: 5g, 10 Hz ... 150 Hz
Shock	16g, 11 ms

Operating conditions for the extended temperature range (+55 °C ... 70 °C)



No function restrictions for the extended temperature range if you observe a minimum spacing of 17.5 mm between the modules. The minimum spacing is the width of a DIN rail connector.
 Otherwise please observe the following restrictions:
 – Only use the analog voltage output (0 V ... 10 V)
 Individual operating conditions available on request.

Certification

Conformance

CE-compliant

UL, USA / Canada

UL 508 Listed
 Class I, Div. 2, Groups A, B, C, D T4A
 Class I, Zone 2, IIC T4

Conformance

EMC directive 2004/108/EC

EN 61000-6-2; EN 61000-6-4

Tolerances influenced by electromagnetic interference

Type of electromagnetic interference

Typical deviation of the measuring range final value (current output)

	Typical deviation of the measuring range final value (current output)	
	Relative	Absolute
-		
Electromagnetic fields according to EN 61000-4-3/IEC 61000-4-3	< ±0.2 %	±40 µA
Conducted interference according to EN 61000-4-6/IEC 61000-4-6	< ±0.2 %	±40 µA
Fast transients (burst) according to EN 61000-4-4/IEC 61000-4-4	< ±0.2 %	±40 µA

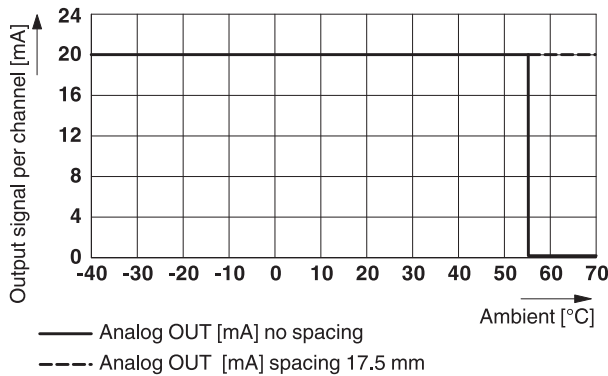


Figure 1 Derating the analog outputs

5 Safety regulations and installation notes



WARNING: Risk of electric shock

- Provide a switch/circuit breaker close to the device, which is labeled as the disconnect device for this device or the entire control cabinet.
- Disconnect the device from all power sources during maintenance work and configuration (the device can remain connected to SELV or PELV circuits).
- The housing of the device provides a basic insulation against the neighboring devices, for 300 V eff. If several devices are installed next to each other, this has to be taken into account, and additional insulation has to be installed if necessary. If the neighboring device is equipped with basic insulation, no additional insulation is necessary.
- Use either a current or voltage output per analog channel!

5.1 Installation notes



WARNING:

Observe the following safety notes when using the device.

- Installation, operation, and maintenance may only be carried out by qualified electricians. Follow the installation instructions as described.
- When installing and operating the device, the applicable regulations and safety directives (including national safety directives), as well as general technical regulations, must be observed. The technical data is provided in the package slip and on the certificates (conformity assessment, additional approvals where applicable).
- The device must not be opened or modified. Do not repair the device yourself, replace it with an equivalent device. Repairs may only be carried out by the manufacturer. The manufacturer is not liable for damage resulting from violation.
- The IP20 protection (IEC 60529/EN 60529) of the device is intended for use in a clean and dry environment. The device must not be subject to mechanical strain and/or thermal loads, which exceed the limits described.
- To protect the device against mechanical or electrical damage, install it in a suitable housing with appropriate degree of protection as per IEC 60529.

5.2 UL Notes

INDUSTRIAL CONTROL EQUIPMENT FOR HAZARDOUS LOCATIONS 45FP

- A This equipment is suitable for use in Class I, Zone 2, IIC T4 and Class I, Division 2, Groups A, B, C,D T4A hazardous locations or non-hazardous locations only.
- B WARNING - EXPLOSION HAZARD - DO NOT DISCONNECT EQUIPMENT UNLESS POWER HAS BEEN SWITCHED OFF OR THE AREA IS KNOWN TO BE NON-HAZARDOUS.
- C WARNING - EXPLOSION HAZARD - SUBSTITUTION OF COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS 1, DIVISION 2.
- D These devices are open-type devices that are to be installed in an enclosure suitable for the environment that is only accessible with the use of a tool.
- E WARNING - Exposure to some chemicals may degrade the sealing properties of materials used in relays within this device.

6 Installation



NOTE: electrostatic discharge!

The device contains components that can be damaged or destroyed by electrostatic discharge. When handling the device, observe the necessary safety precautions against electrostatic discharge (ESD) according to EN 61340-5-1 and IEC 61340-5-1.

6.1 Structure

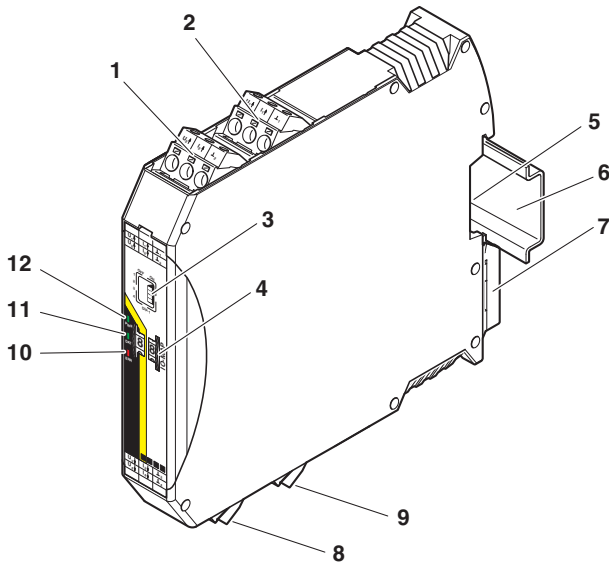


Figure 2 Function elements

Pos.	Designation
1	Analog output 2 (alternatively current/voltage output)
2	Analog output 1 (alternatively current/voltage output)
3	DIP switches for configuring the analog outputs (current/voltage output)
4	White thumbwheel for setting the I/O-MAP address
5	Connection option for TBUS DIN rail connector
6	DIN rail
7	Metal foot catch for DIN rail fixing
8	Analog output 3 (alternatively current/voltage output)
9	Analog output 4 (alternatively current/voltage output)
10	ERR status LED, red (communication error)
11	DAT status LED, green (BUS communication)
12	PWR status LED, green (supply voltage)

6.2 Basic circuit diagram

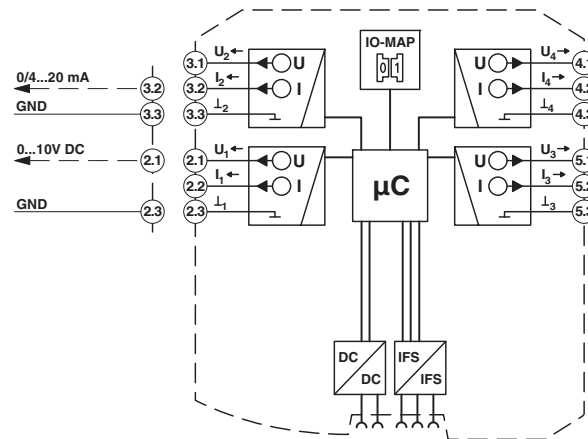


Figure 3 Basic circuit diagram

6.3 Configuration

The DIP switches on the front can be used to set the behavior of the outputs in the event of an error (e.g., interruption of the bus communication by interruption of the wireless connection).

For the analog outputs you can either select the "reset" option (output value set to 0 = "RESET") or the "hold last value" option ("HOLD").

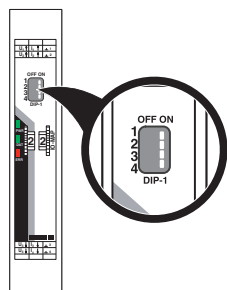


Figure 4 DIP switches

Output	Configuration	DIP switch			
		1	2	3	4
Analog OUT1	RESET	OFF			
Analog OUT1	HOLD	ON			
Analog OUT2	RESET		OFF		
Analog OUT2	HOLD		ON		
Analog OUT3	RESET			OFF	
Analog OUT3	HOLD			ON	
Analog OUT4	RESET				OFF
Analog OUT4	HOLD				ON

I/O MAP address

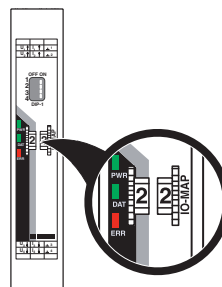


Figure 5 Thumb wheel

Use the thumbwheel to set the I/O-MAP address. The extension module in the SATEL-LP wireless system is addressed using the I/O-MAP address.

The following conditions must be met:

On the entire wireless network, addresses 1 to 99 (I/O MAP) (maximum) may be assigned for the I/O extension modules.

Thumbwheel	Description
01 - 99	I/O MAP address
00	Delivery state
** , 1* - 9*	Setting not permitted
*1 - *9	Interface System slave address, for use with other Interface System (IFS) master devices

Wireless module in I/O data mode

The output device must be provided with the same I/O MAP address as the assigned input device at the other wireless station (I/O mapping). Output modules with the same I/O MAP address may appear several times in the network at different stations.

Example:	I/O MAP address
SATEL-LP-AO4	02
SATEL-LP-AI4	02

Only the SATEL-LP-AI4 module can be assigned to the SATEL-LP-AO4 module.

Wireless module in PLC/Modbus RTU mode

The I/O MAP address may only appear once in the network. Exception: Output modules with the same I/O MAP address may appear several times in the network at different stations.

The output data is saved in a Modbus memory map in the master wireless module. You can read or write the process data via the serial interface of the master wireless module (RAD-ID = 01) using the Modbus RTU commands (see Section 7).

6.4 Display and diagnostic elements

The I/O extension module uses a total of three LEDs to indicate the operating states.

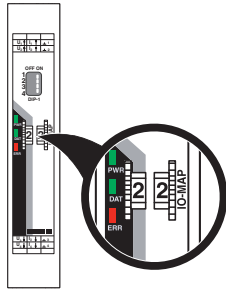


Figure 6 Display and diagnostic elements

PWR LED

The green PWR LED indicates the supply voltage status.

- OFF No supply voltage
- ON Supply voltage OK

DAT LED

The green DAT LED indicates the bus communication status.

- OFF No communication
- Flashing Configuration/addressing mode
- ON Cyclic data communication

ERR LED

The red ERR LED indicates the error status, e.g., no corresponding output module found (e.g., incorrect addressing).

- OFF No error
- Flashing
 - Slow (1.4 Hz) I/O-MAP address changed
 - Fast (2.8 Hz) **Wireless module in I/O data mode**
Missing input module, no bus communication
 - Wireless module in PLC/Modbus RTU mode**
No Modbus communication (safe state of outputs, depending on DIP switch setting)
- ON Critical internal error

6.5 Analog output

Each analog output of the device is designed as active output. All the outputs are electrically isolated from one another, from the supply voltage (via bus foot), and from other electronic components.

The output signal can be selected either as a current signal (0/4...20 mA) or as a voltage signal (0...10 V).

6.6 Assembly/removal

Connection station with I/O extension modules

Up to 32 different I/O extension modules can be connected to every wireless module via the DIN rail connector (see accessories). Data is transmitted and power is supplied to the I/O extension modules via the bus foot.

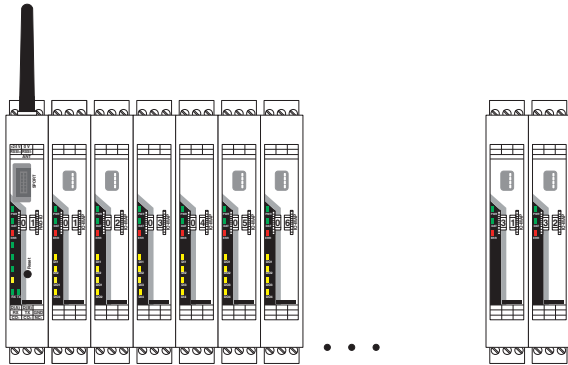


Figure 7 SATEL-LP connection station with up to 32 I/O extension modules



The I/O extension modules must only be mounted to the right of the wireless module.

To mount on the DIN rail connector, proceed as follows:

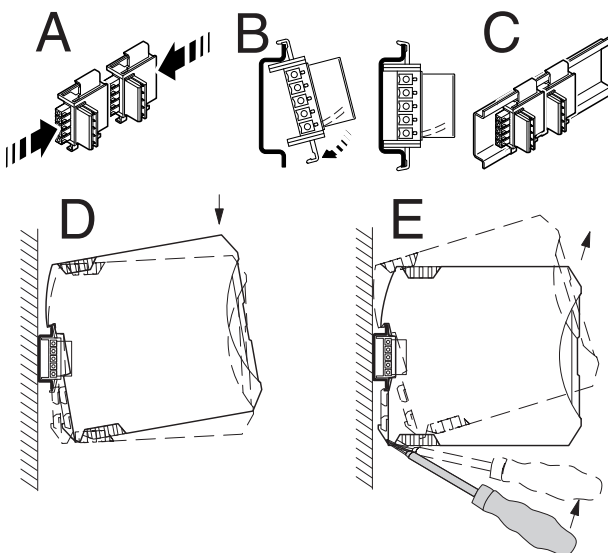


Figure 8 Mounting and removing

When using the device in a connection station, use the 17.5 mm wide DIN rail connector supplied. Only use the DIN rail connector in connection with 24 V DC devices.

- Connect the DIN rail connectors together for a connection station.
- Push the connected DIN rail connectors into the DIN rail.
- Place the device onto the DIN rail from above. Ensure the device and DIN rail connector are aligned correctly.
- Holding the device by the housing cover, carefully push the device towards the mounting surface so that the device bus connector is securely fixed onto the DIN rail connector.
- Once the snap-on foot has been audibly snapped onto the DIN rail, check that it is fixed securely. The device is only mechanically secured via the DIN rail.
- Connect the desired number of I/O extension modules to the wireless module via the DIN rail connector.
- Install the device in suitable housing to meet the requirements for the protection class.
- During startup, check that the device is operating, wired, and marked correctly.

To remove, proceed as follows:

- Use a suitable screwdriver to release the locking mechanism on the snap-on foot of the device.
- Hold onto the device by the housing cover and carefully tilt it upwards.
- Carefully lift the device off the DIN rail connector and the DIN rail.

6.7 Connecting the cables

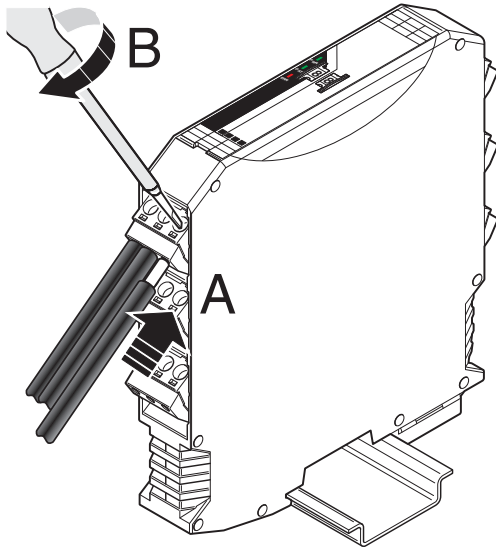


Figure 9 Connecting the cables

- Crimp ferrules to the wires.
Permissible cable cross section: 0.2...2.5 mm².
- Insert the wire with ferrule into the corresponding connection terminal block.
- Use a screwdriver to tighten the screw in the opening above the connection terminal block.
Tightening torque: 0.6 Nm

7 Process data

You can read or write the process data via the serial interface of the master wireless module (RAD ID = 01) using Modbus RTU commands.

With the SATEL-LP-CONF software, you can set the wireless module's network application to "PLC/Modbus RTU mode".

I/O module	SATEL-LP-AO4
Module type	30 _{hex}
Number of registers	06 _{hex}
Address space	40xx0 ... 40xx5
Modbus function code	fc 03, 16

xx = I/O MAP address set using the white thumbwheel

40xx0	Module type and currentness of data																
15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00	Y	Module type

Register values:

Module type If the module type in the register is invalid or unavailable, then the register value is 0

Currentness of data Y = Currentness of data, bit 8
If the data in the register is not up-to-date, then the register value is 1.

If process data has been written to one of the registers, the register value is 0.

The register value then remains 0 for the entire operating time of the device.

40xx1	Reserved
-------	----------

40xx2	Analog output 1 (terminal point 2.x)																
15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00	AO1	

40xx3	Analog output 2 (terminal point 3.x)																
15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00	AO2	

40xx4	Analog output 3 (terminal point 4.x)																
15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00	AO3	

40xx5	Analog output 4 (terminal point 5.x)																
15	14	13	12	11	10	09	08	07	06	05	04	03	02	01	00	AO4	

40xx6 ... 40xx9	Reserved
-----------------	----------

Illustration of analog values

Data word		0 mA ... 20 mA	0 ... 10 V
hex	dec		
0000	0	0 mA	0 V
7530	30000	20 mA	10 V
7F00	32512	21.67 mA	10.84 V